



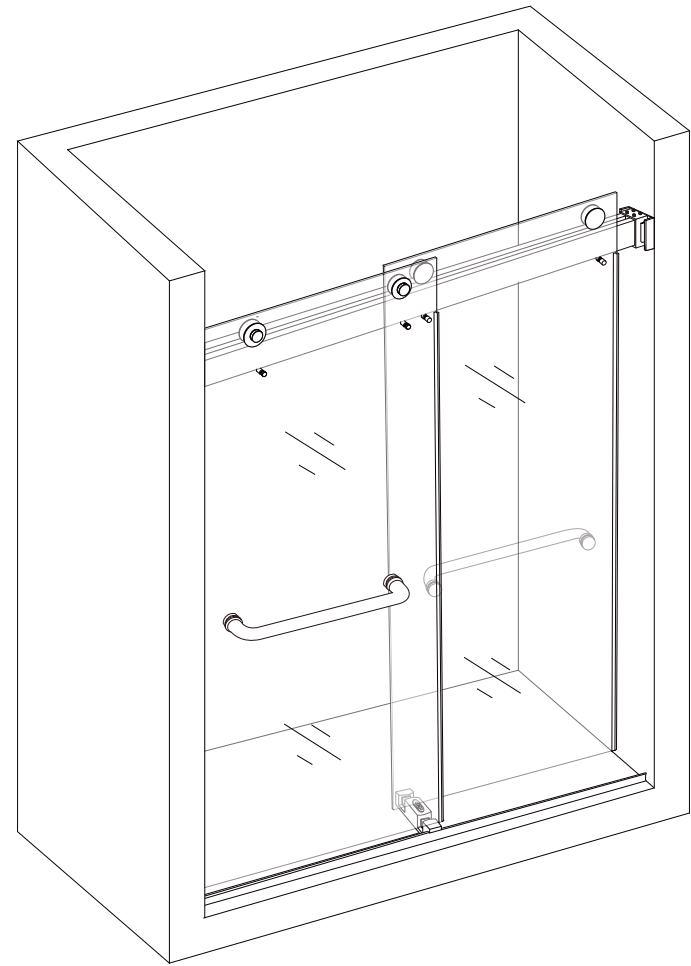


OSK-228(60"*76")

INSTALLATION STEPS

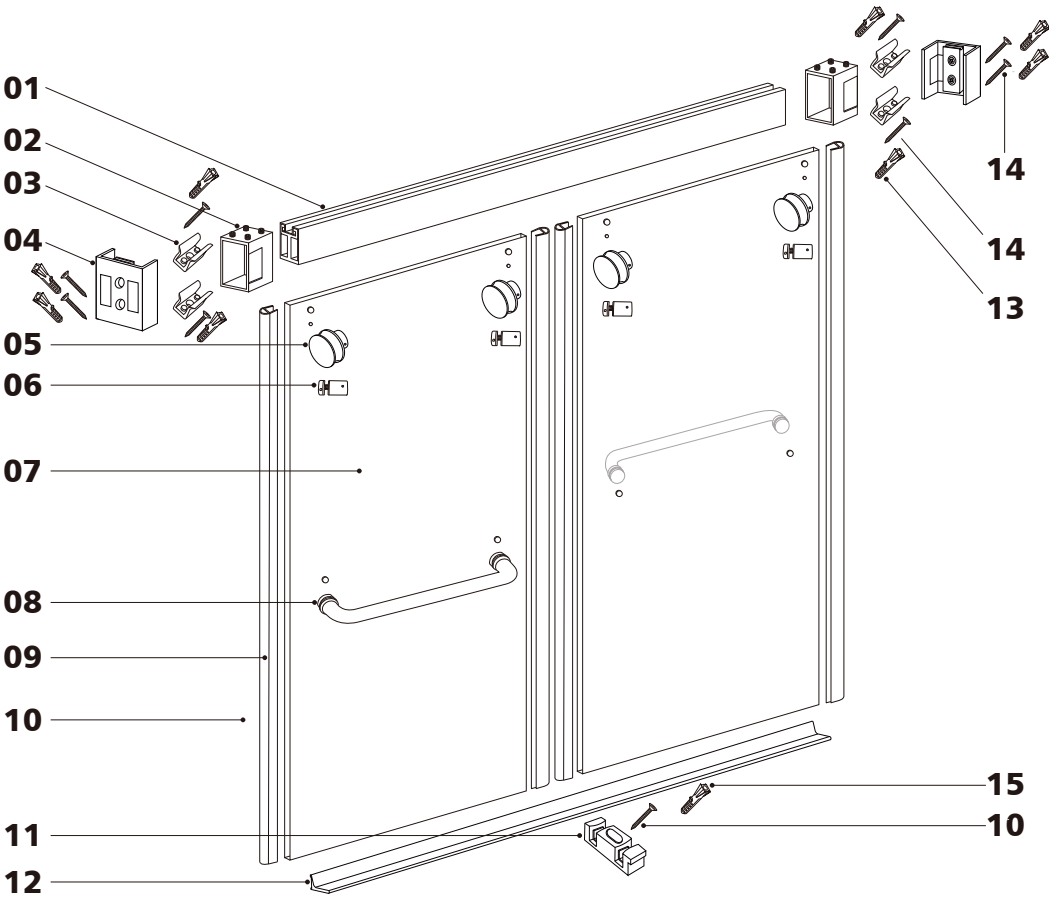

Parts List					
#	ITEM	Qty	#	ITEM	Qty
1	Upper Guide Rail	1pc	9	Water Retaining Strip	4pcs
2	Wall Cover Accessories	2pcs	10	Screw 4x35	1pc
3	Wall Cover Soft Rubber	4pcs	11	Bottom Guide Block	1pc
4	Wall Cover	2pcs	12	Anti-Splash Threshold	1pc
5	Roller	4pcs	13	Wall Anchor①	8pcs
6	Anti Jumping Knob	4pcs	14	Screw 5x40	8pcs
7	Door Glass	2pcs	15	Wall Anchor②	1pc
8	Door Handle	2pcs			


INSTALLATION STEPS

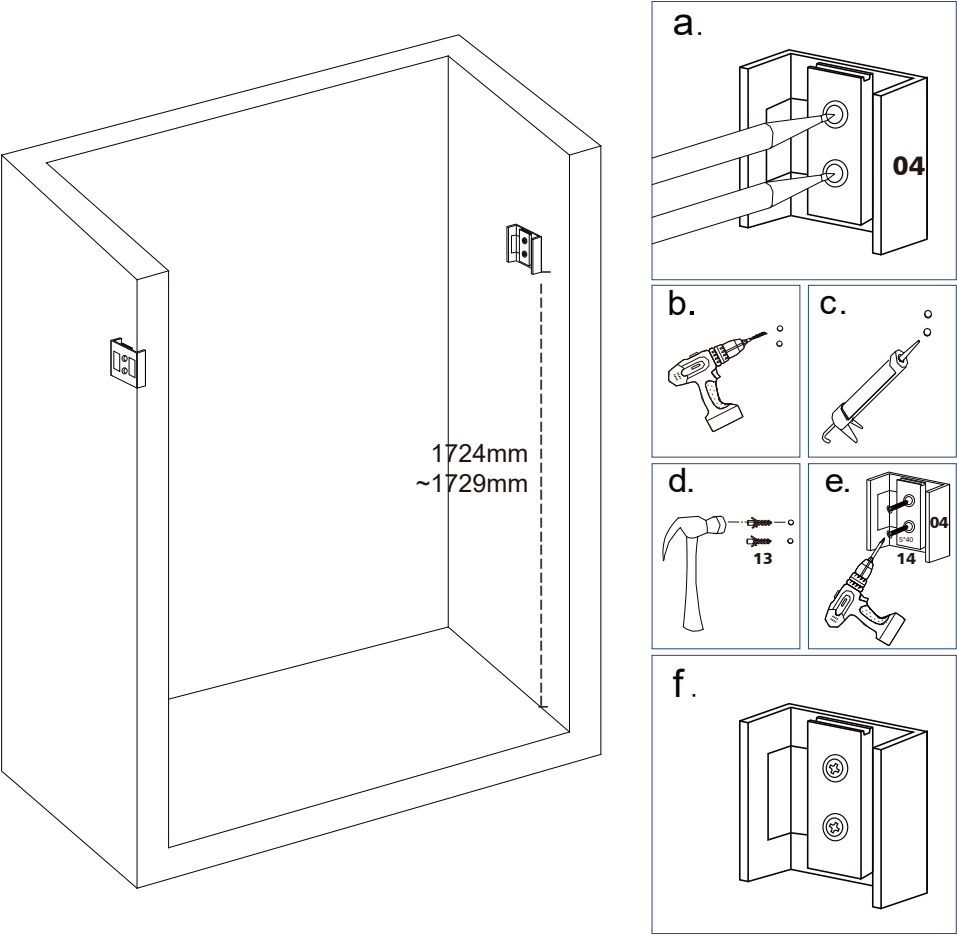


Vertical to the ground, the distance from the bottom of the Wall Cover (#4) to the ground is 1724~1729mm (60"*76").

INSTALLATION STEPS






Loosen the four screws at the top of Wall Cover Accessories(# 2) during installation for easy installation (Don't take it off completely)
After assembling Upper Guide Rail(# 1), Wall Cover Accessories (# 2), and Wall Cover(# 4), tighten the four screws at the top of Wall Cover Accessories(# 2)

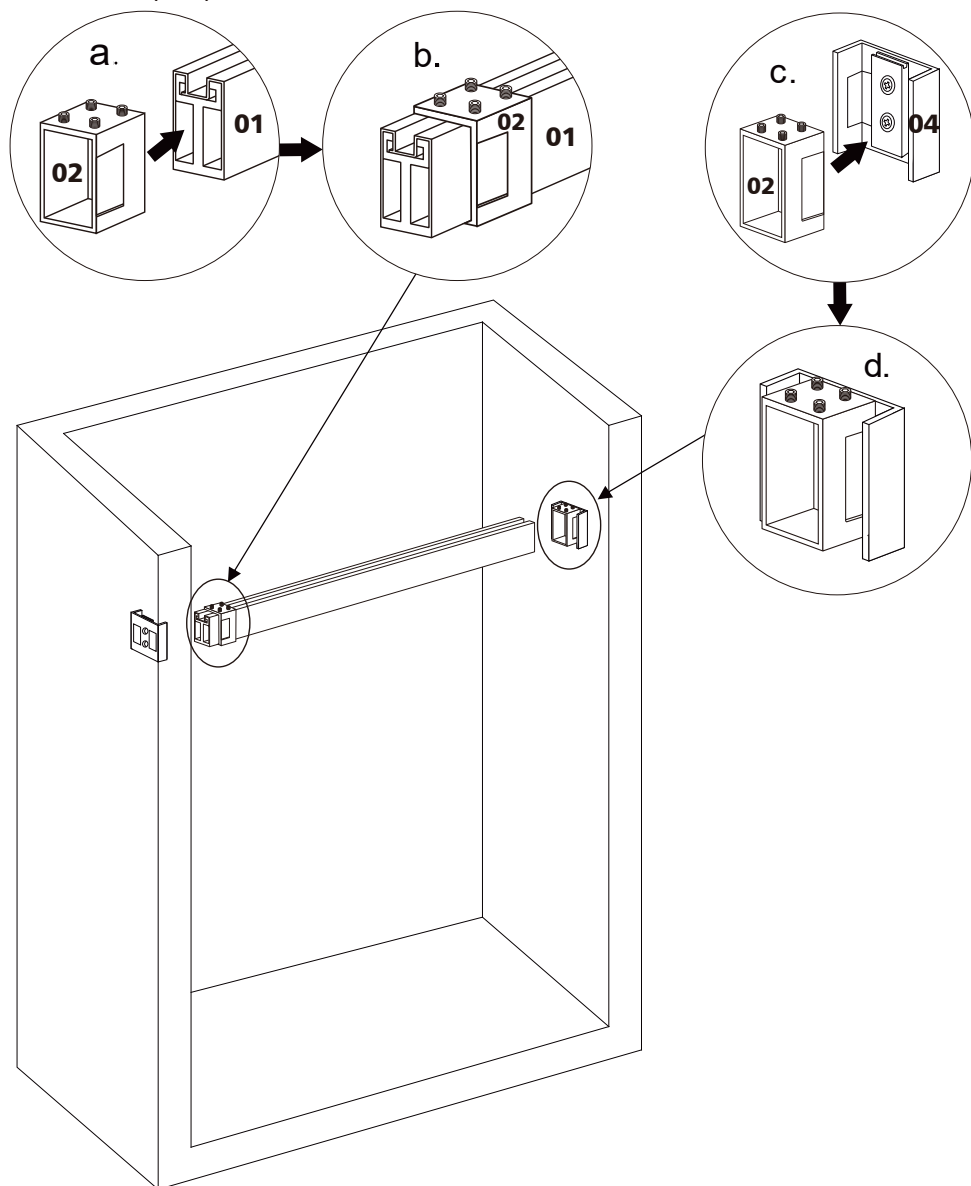









INSTALLATION STEPS

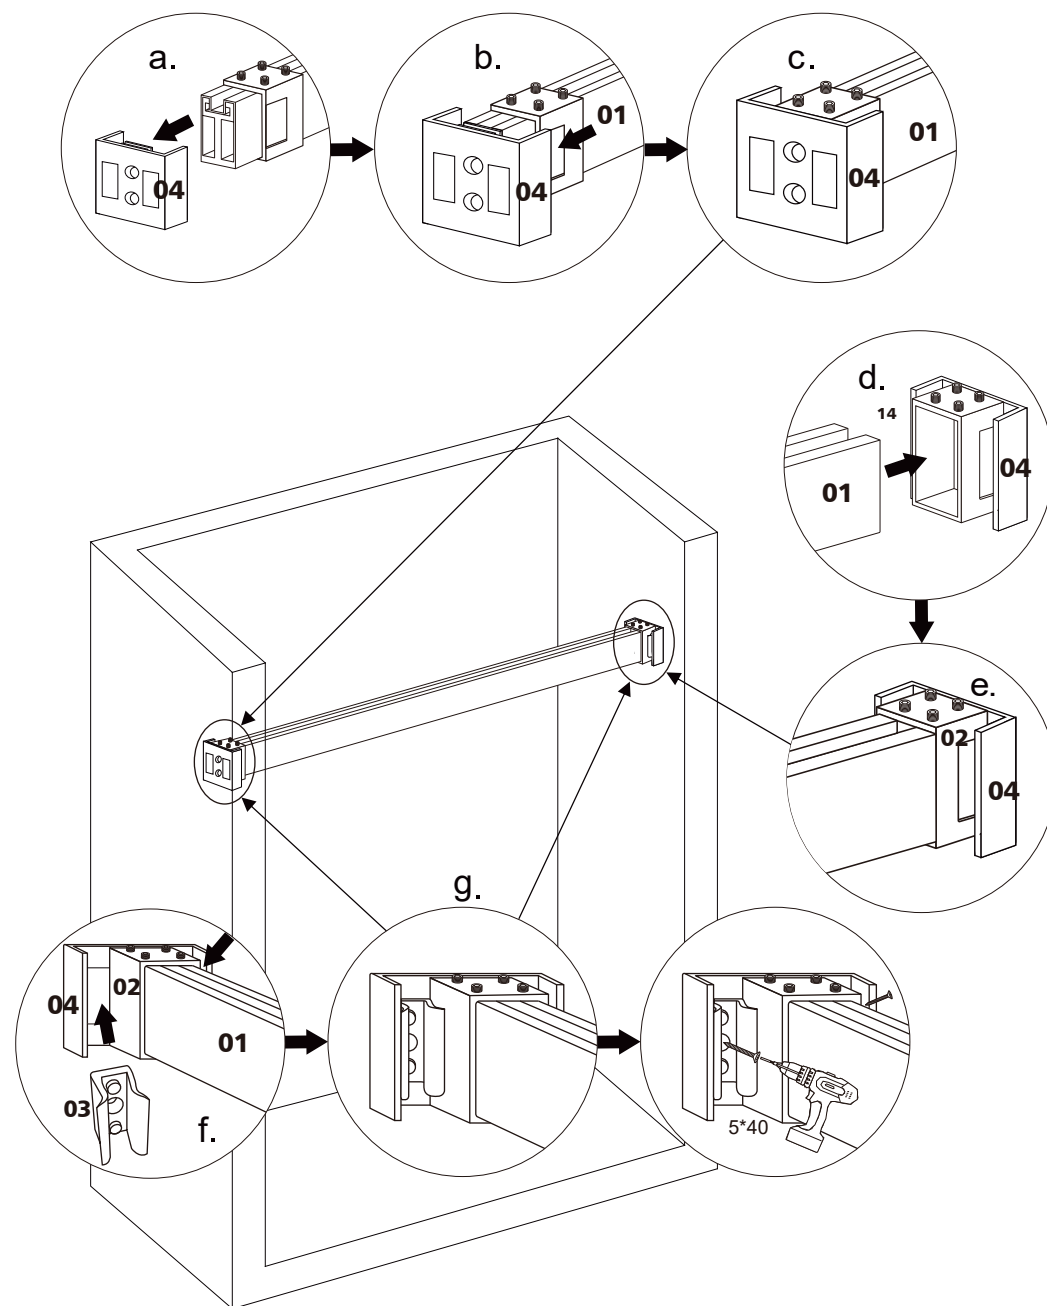



INSTALLATION STEPS

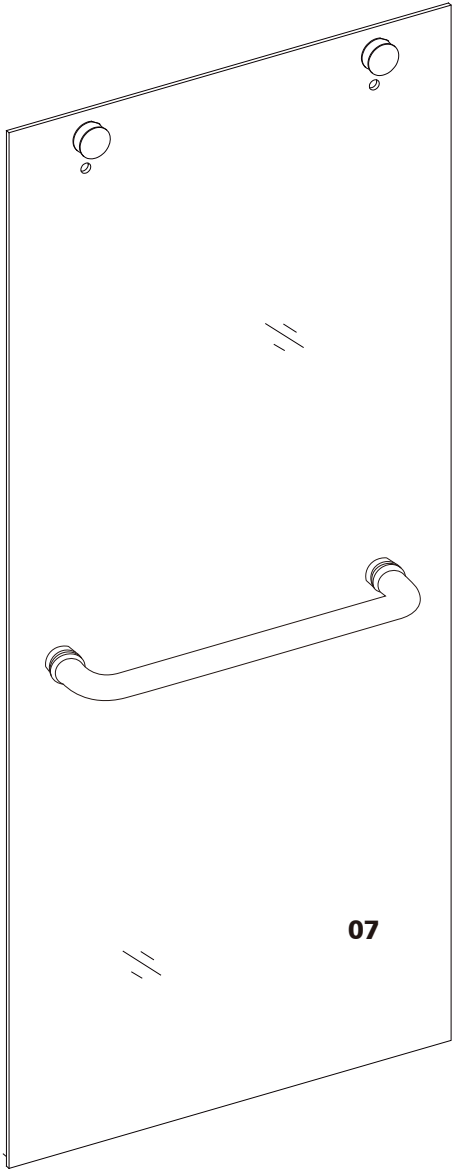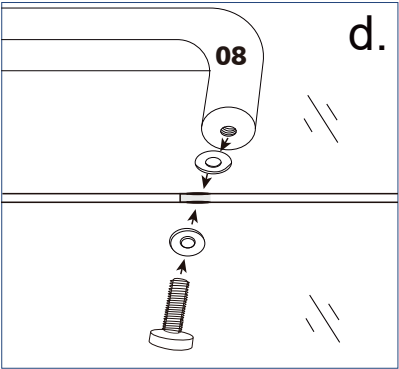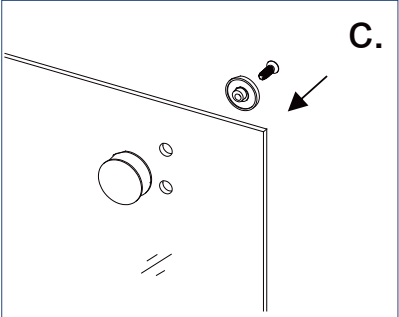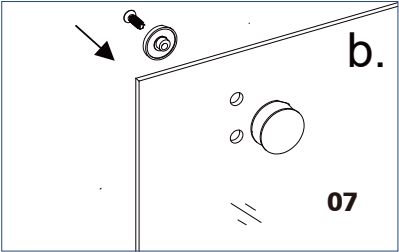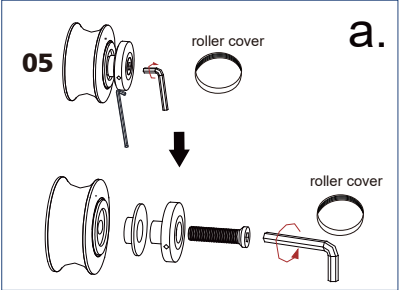

INSTALLATION STEPS

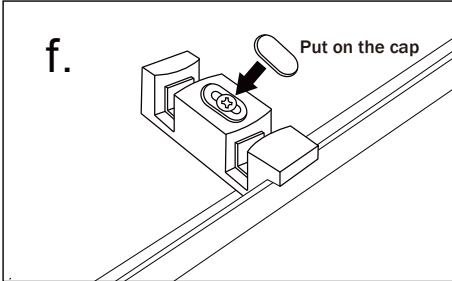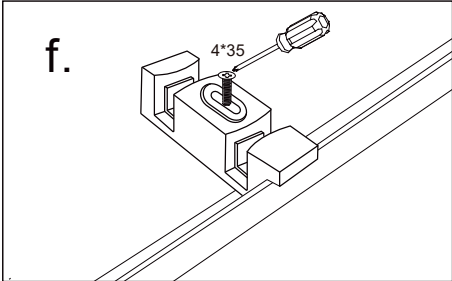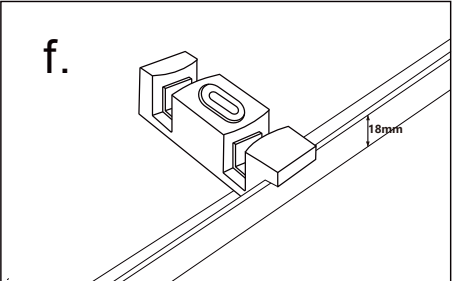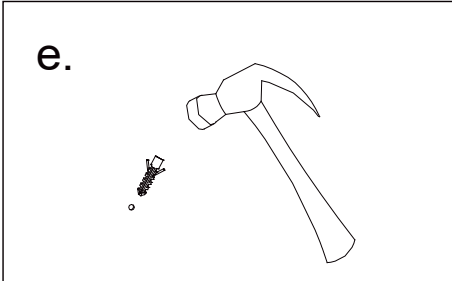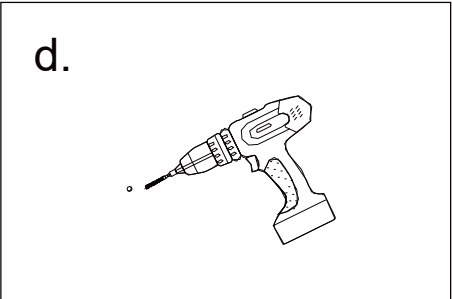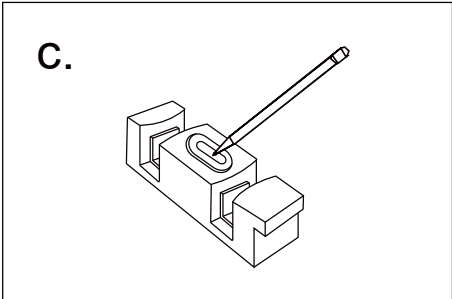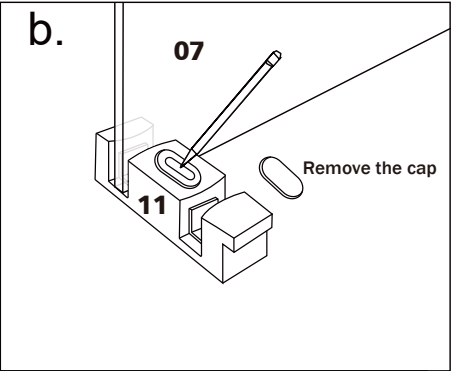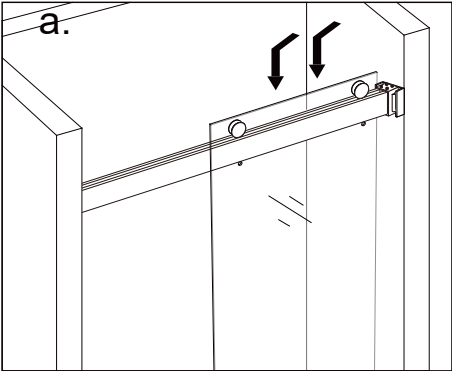


INSTALLATION STEPS

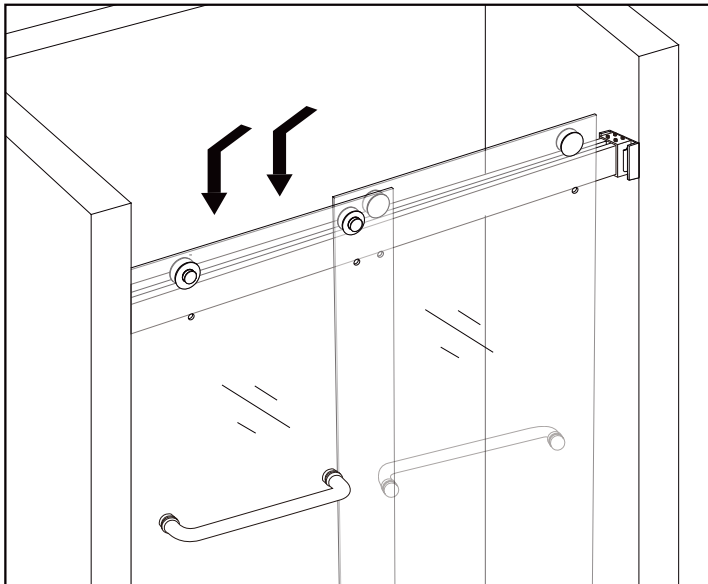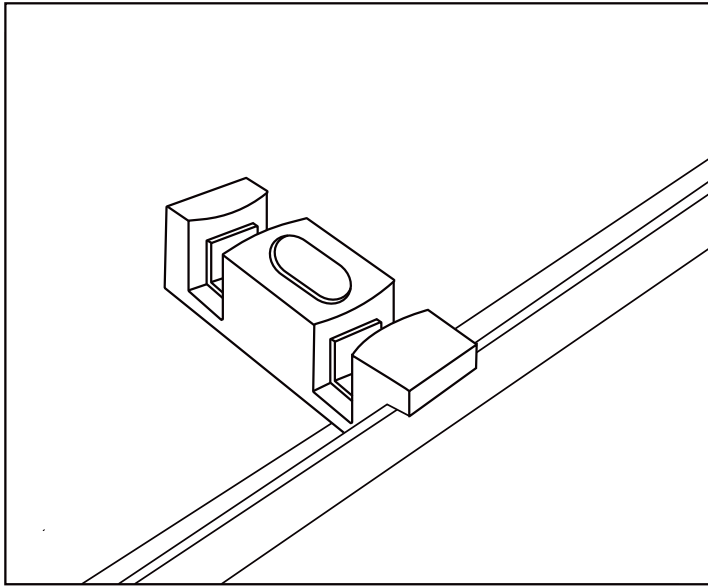


INSTALLATION STEPS

The top of Anti Jumping Knob (#6) should be 1 mm away from the bottom of the Upper Guide Rail(#1)

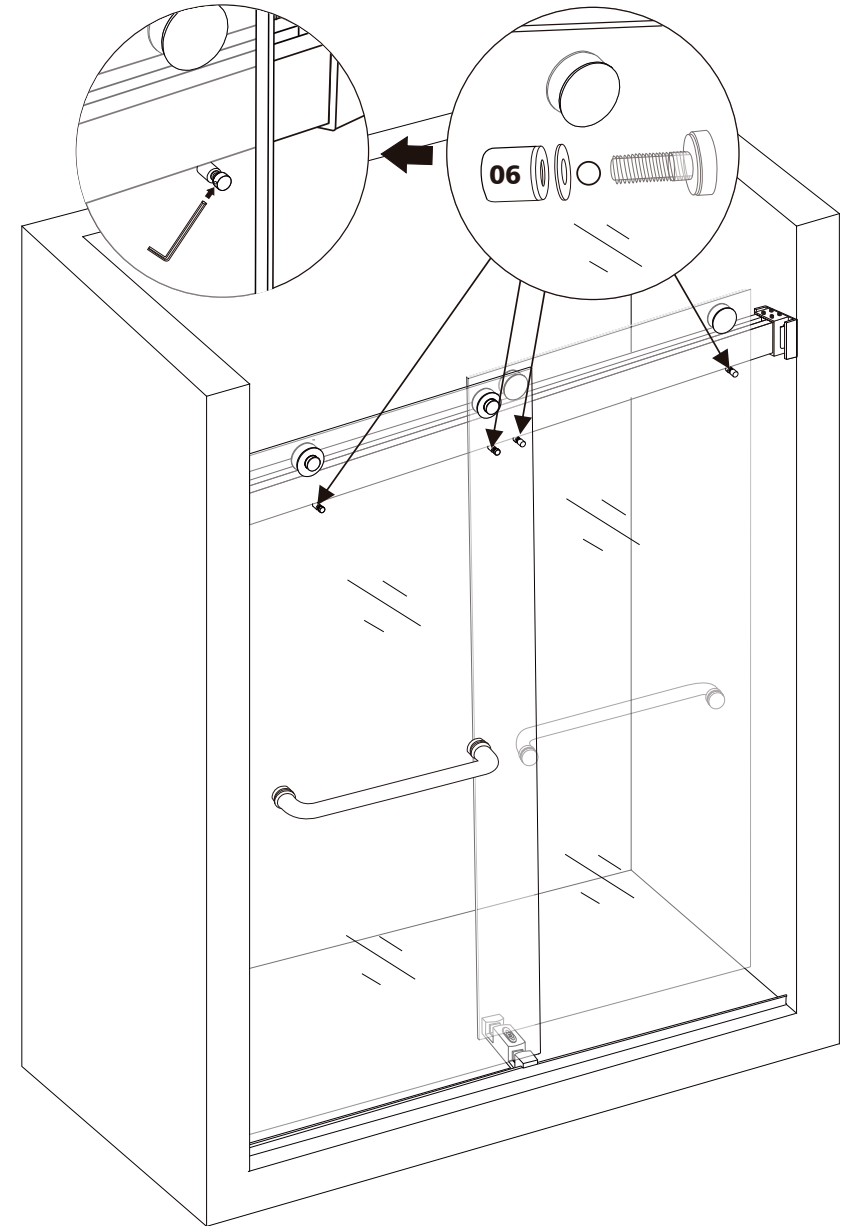

INSTALLATION STEPS

The top of the Water Retaining Strip(#09) is below
the Upper Guide Rail(#01)
Align the bottom with the ground

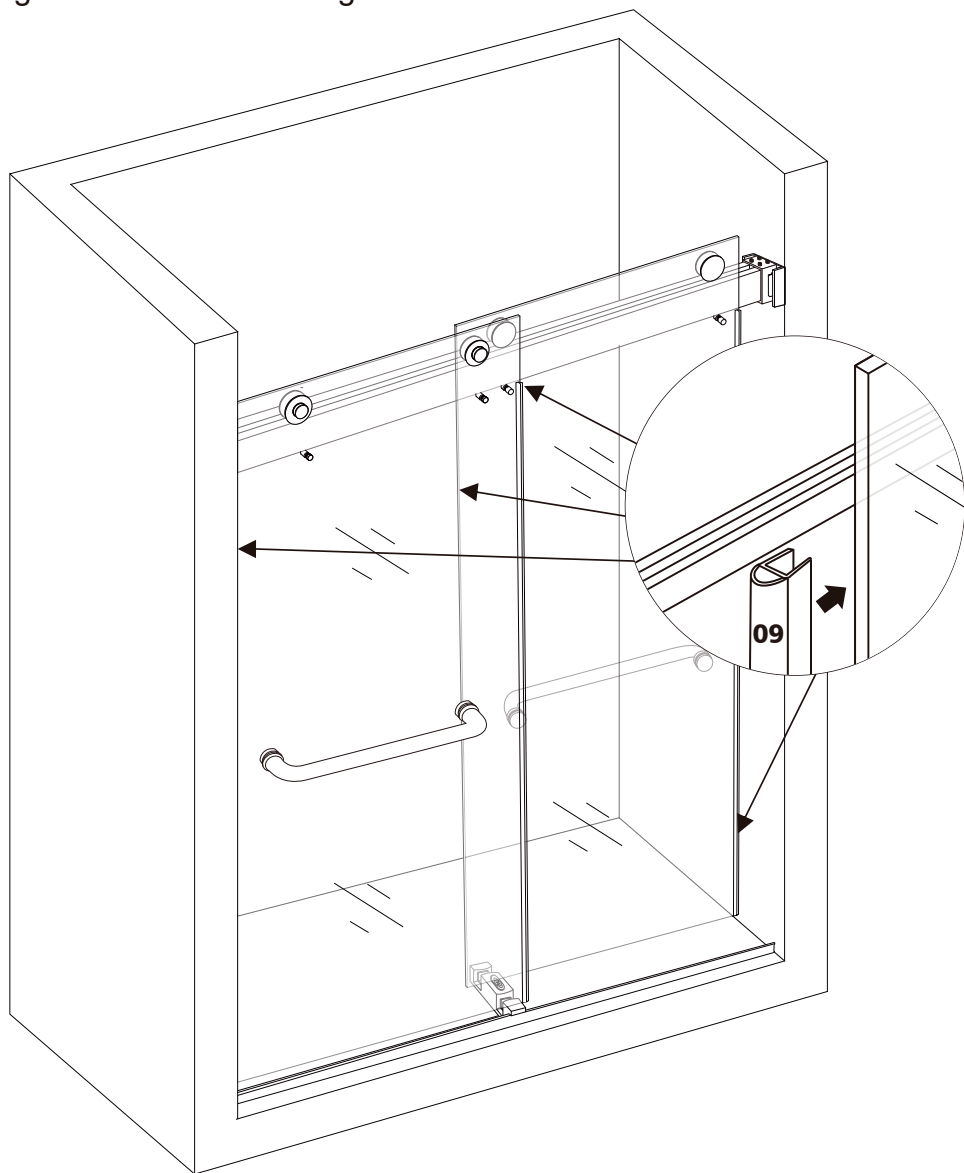

INSTALLATION STEPS

Allow 24 hours for the silicone to fully cure before using the shower.

