
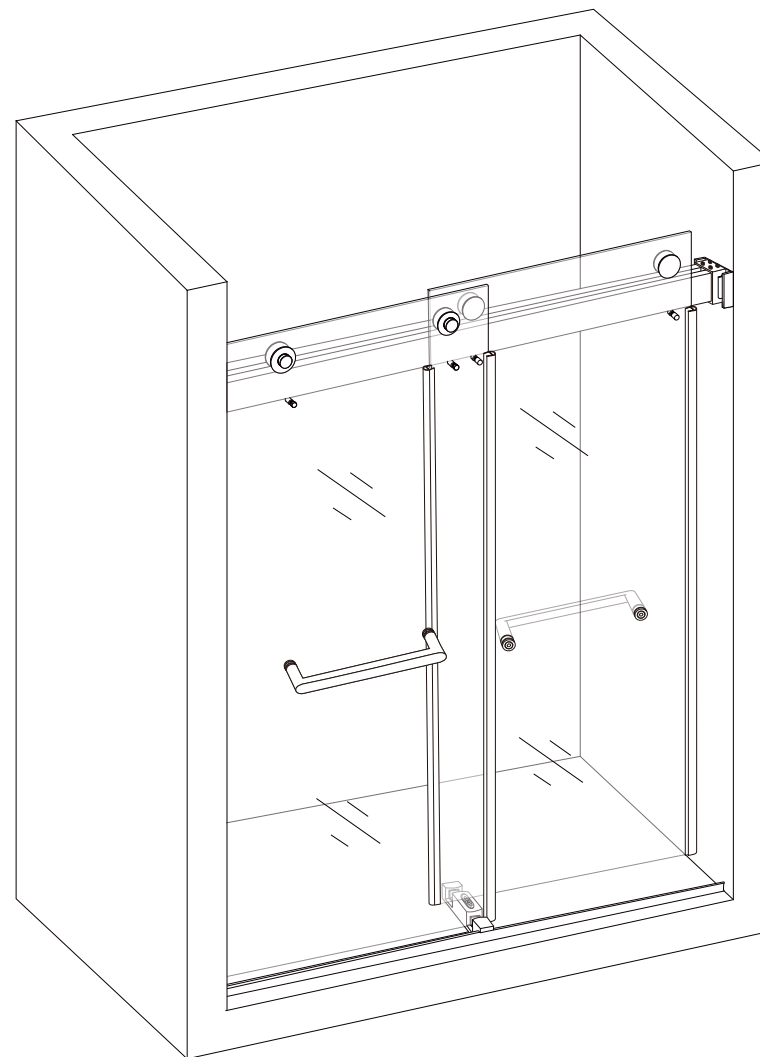


INSTALLATION STEPS


Apply silicone sealant on the seams between the Anti-splash Threshold (#12) and the shower floor.

**MUST ALLOW SILICONE TO DRY FOR 24 HOURS
BEFORE STARTING USING THE SHOWER**

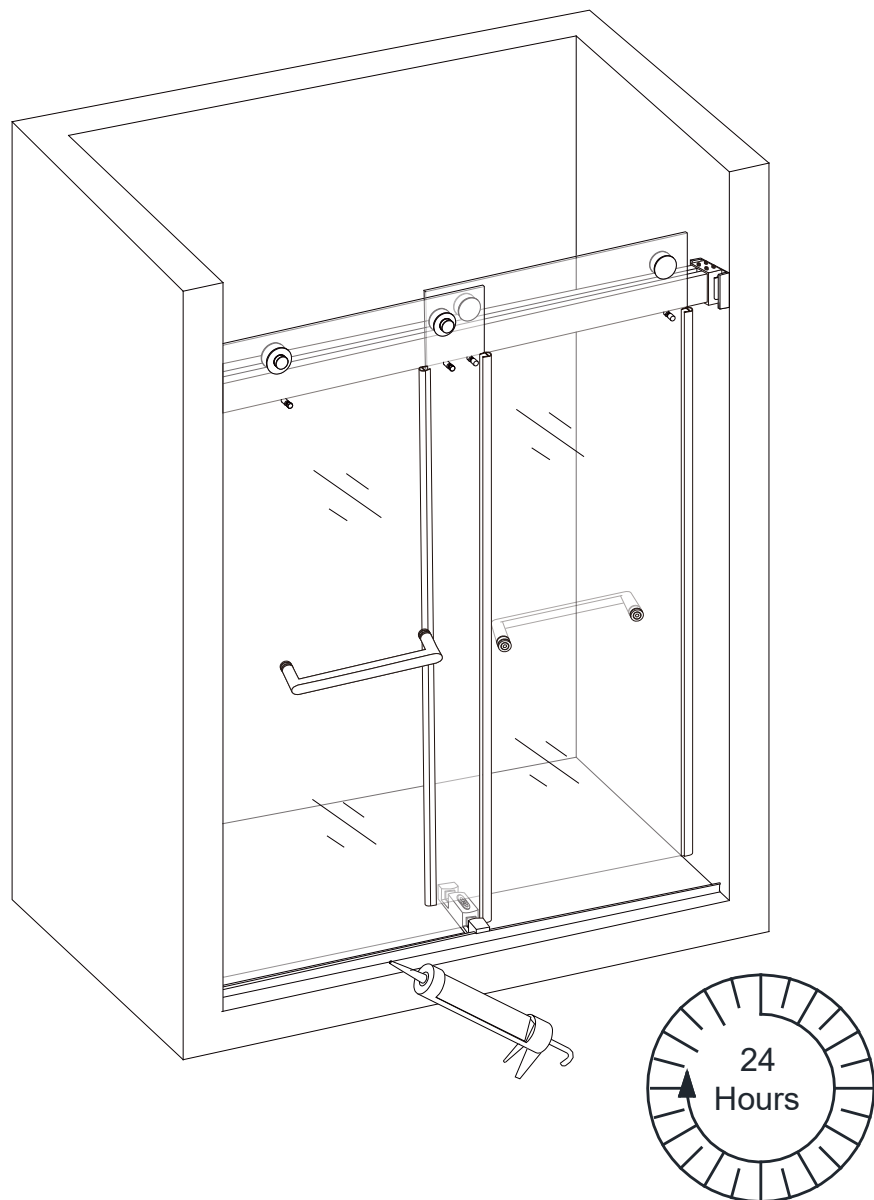


TT-6076

INSTALLATION STEPS

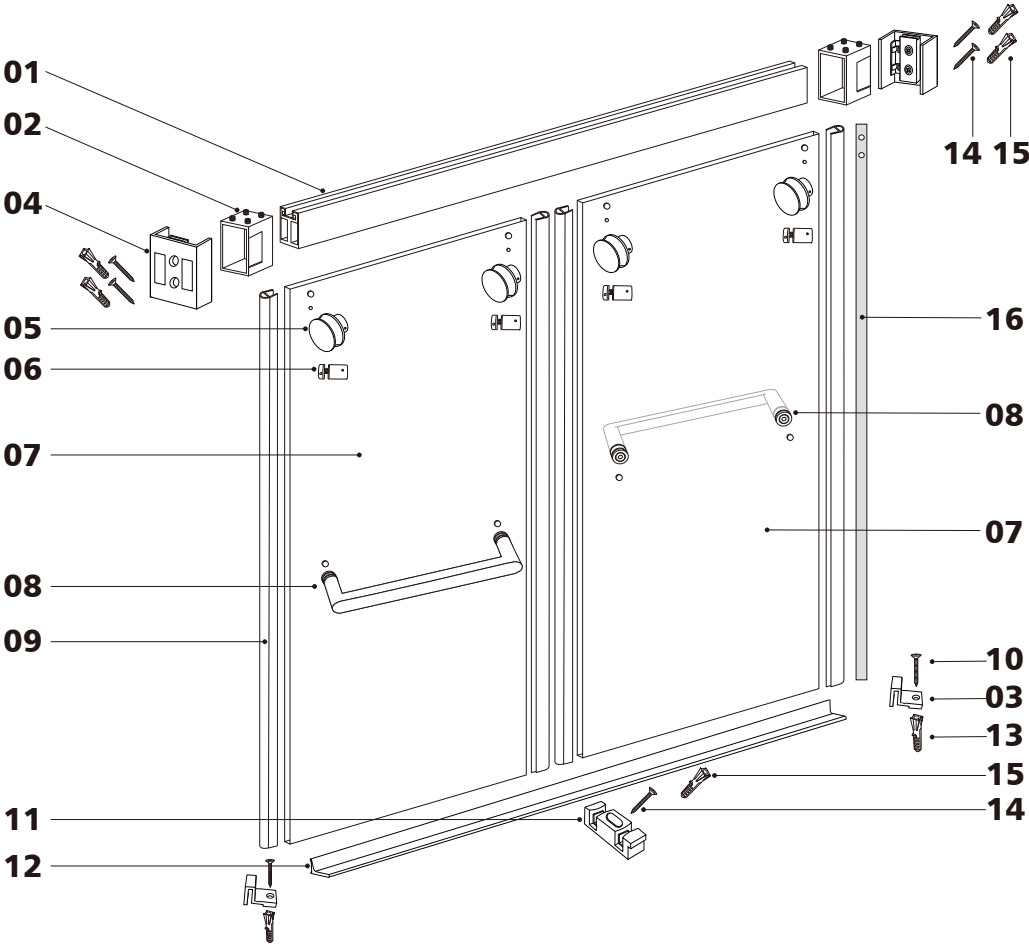


Parts List					
#	ITEM	Qty	#	ITEM	Qty
1	Upper Guide Rail	1pc	10	Screw 4x30	2pcs
2	Wall Cover Accessories	2pcs	11	Bottom Guide Block	1pc
3	Positioning Block	2pcs	12	Anti-Splash Threshold	1pc
4	Wall Cover	2pcs	13	Wall Anchor①	2pcs
5	Roller	4pcs	14	Screw 5x40	5pcs
6	Anti Jumping Knob	4pcs	15	Wall Anchor②	5pcs
7	Door Glass	2pcs	16	Measuring Tool	1pc
8	Door Handle	2pcs			
9	Water Retaining Strip	4pcs			

INSTALLATION STEPS

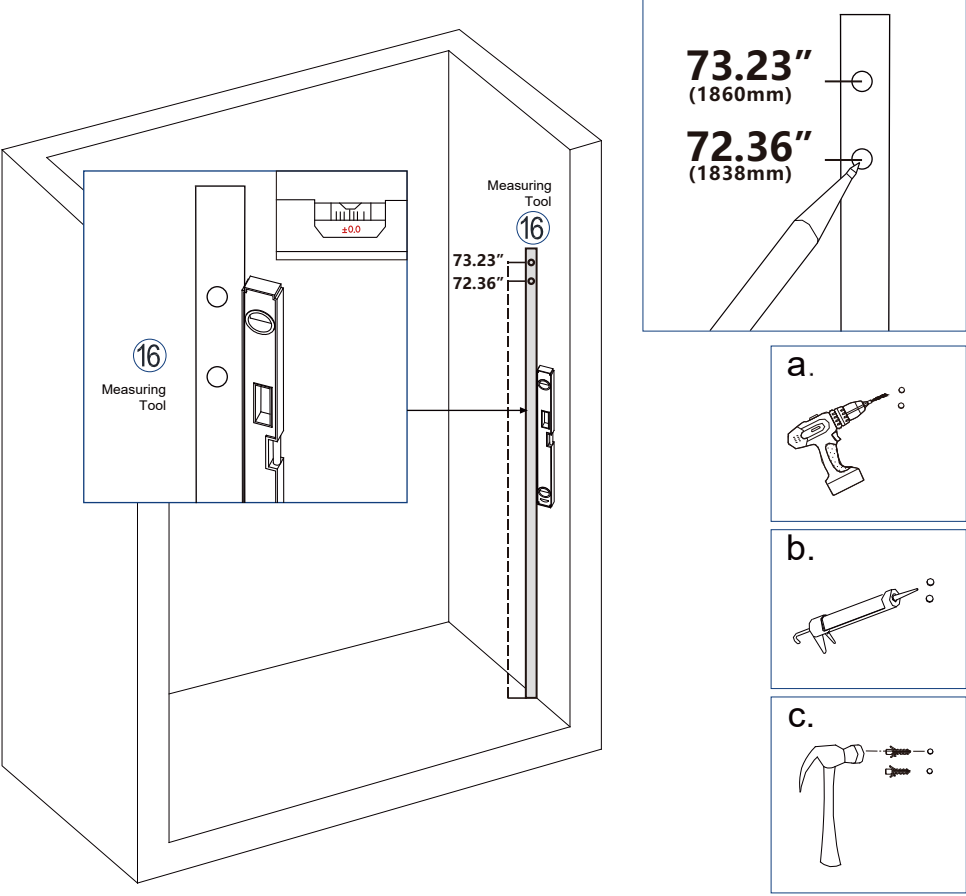

Place the Measuring Tool (#16) vertically on the left and right walls from the ground. Mark the position of the installation holes on the walls according to the holes on the measuring Tool (#16).
(The hole height on the top of the Measuring Tool (#16) is 73.23 inches(1860mm), and the hole height below is 72.36 inches(1838mm).
Drill holes at the marked locations above and apply silicone into the holes, then insert the Wall Anchors (#15) into the holes for the installing Guide Rail Bracket.


INSTALLATION STEPS

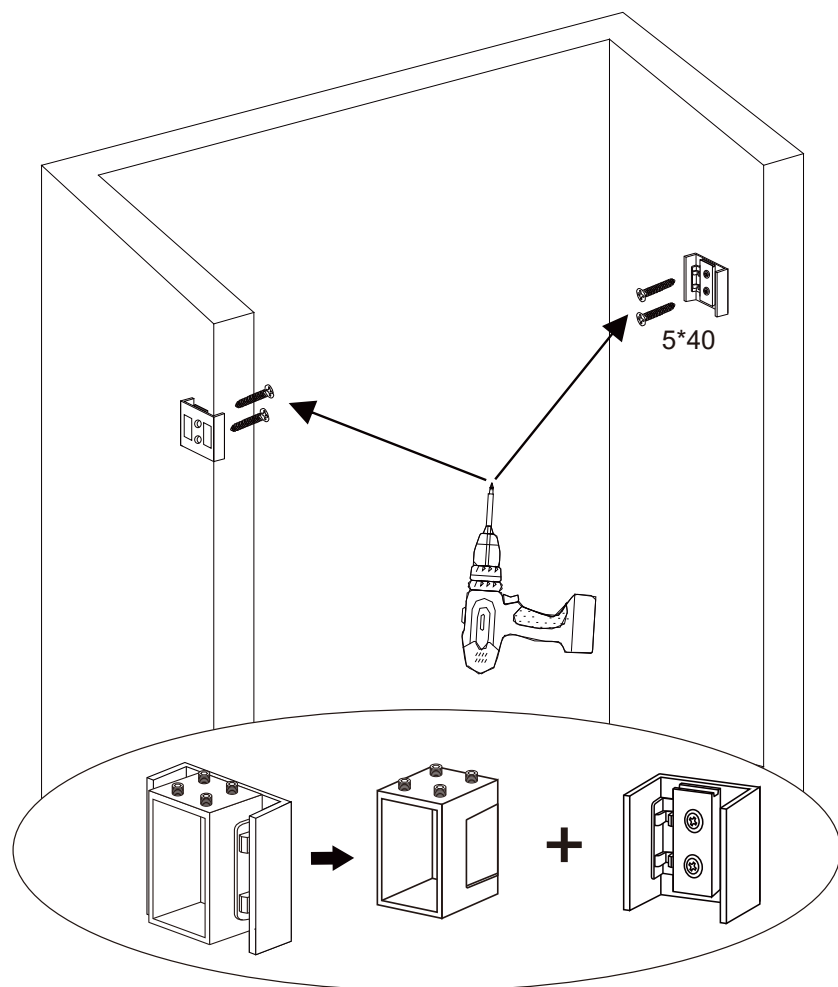


Use Screw 5x40 (#14) to fix the Wall Cover(#4) in the hole drilled on the wall in the previous step as shown in the picture. The other side of the Wall Cover (#4) is installed in the same way. Note: Components Wall Cover Accessories(# 2) and Wall Cover(#4) are assembled together in the accessory box. During installation, use the L-shaped wrench included in the accessory kit to unscrew the four threaded bolts on top of component Wall Cover(#4), separating components Wall Cover Accessories(# 2) and Wall Cover(#4).

INSTALLATION STEPS


Loosen the four screws at the top of Wall Cover Accessories(#2) during installation for easy installation (Don't take it off completely)
After assembling Upper Guide Rail(# 1), Wall Cover Accessories (# 2), and Wall Cover(# 4), tighten the four screws at the top of Wall Cover Accessories(# 2)

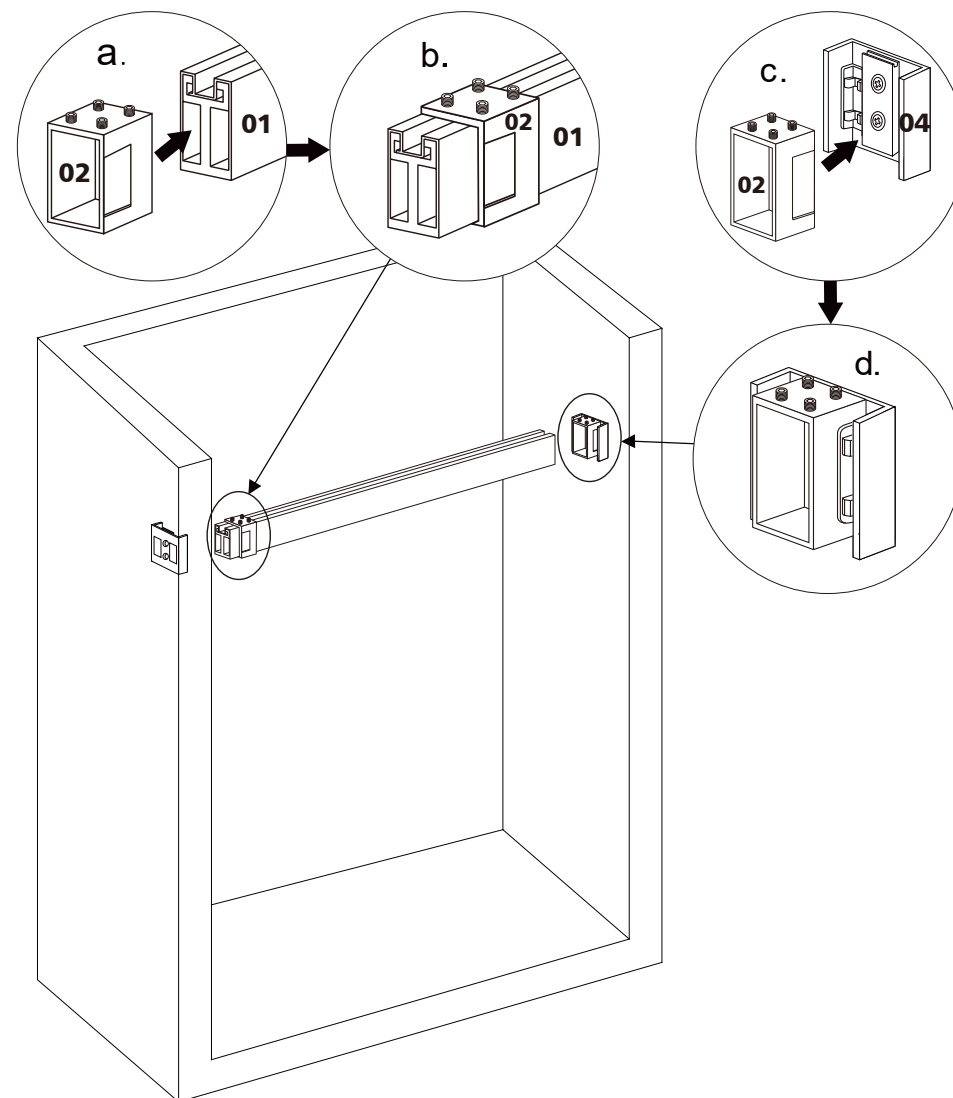


INSTALLATION STEPS

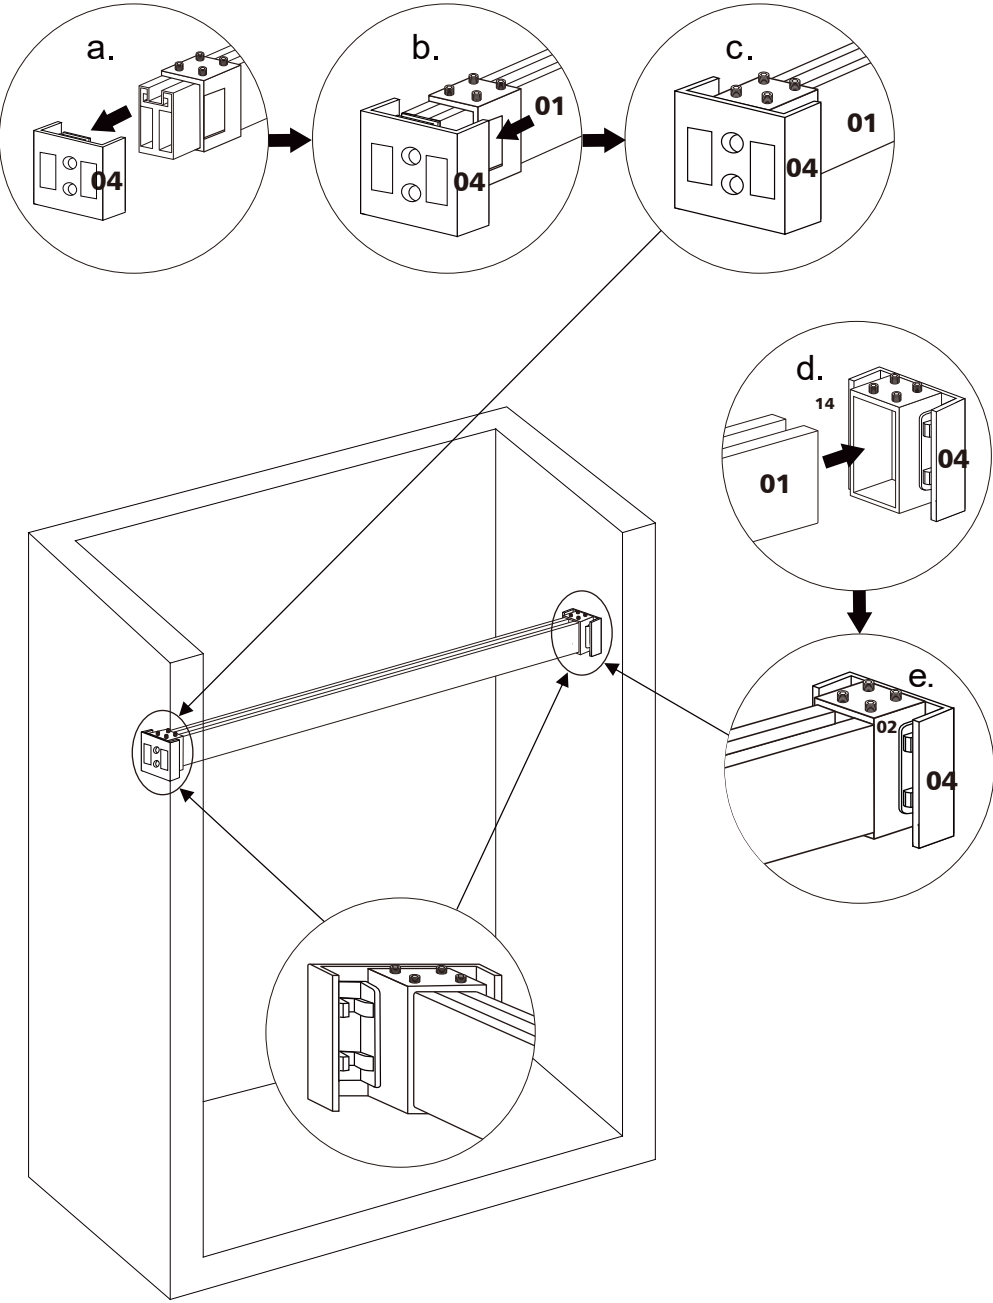


INSTALLATION STEPS

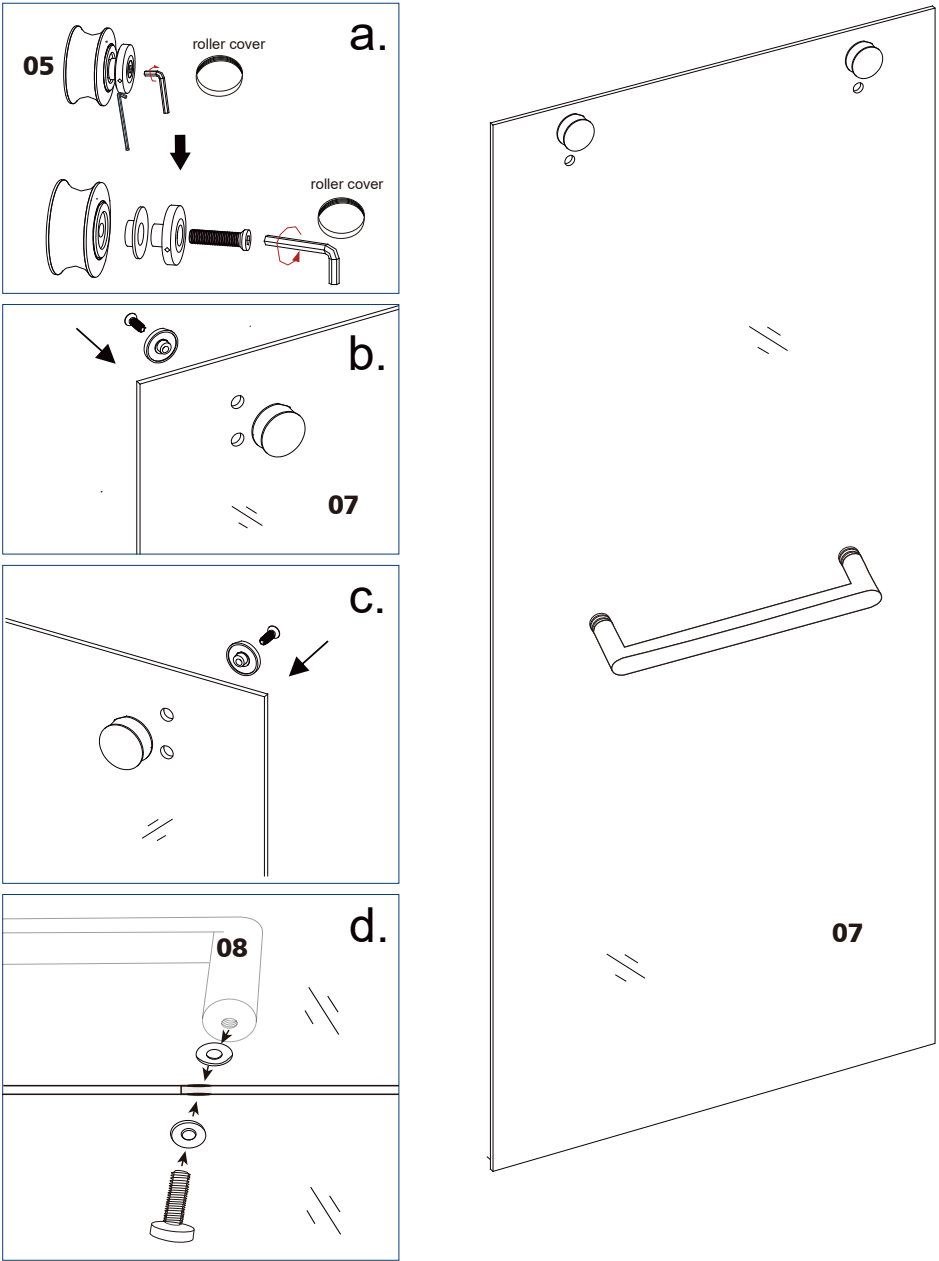

INSTALLATION STEPS

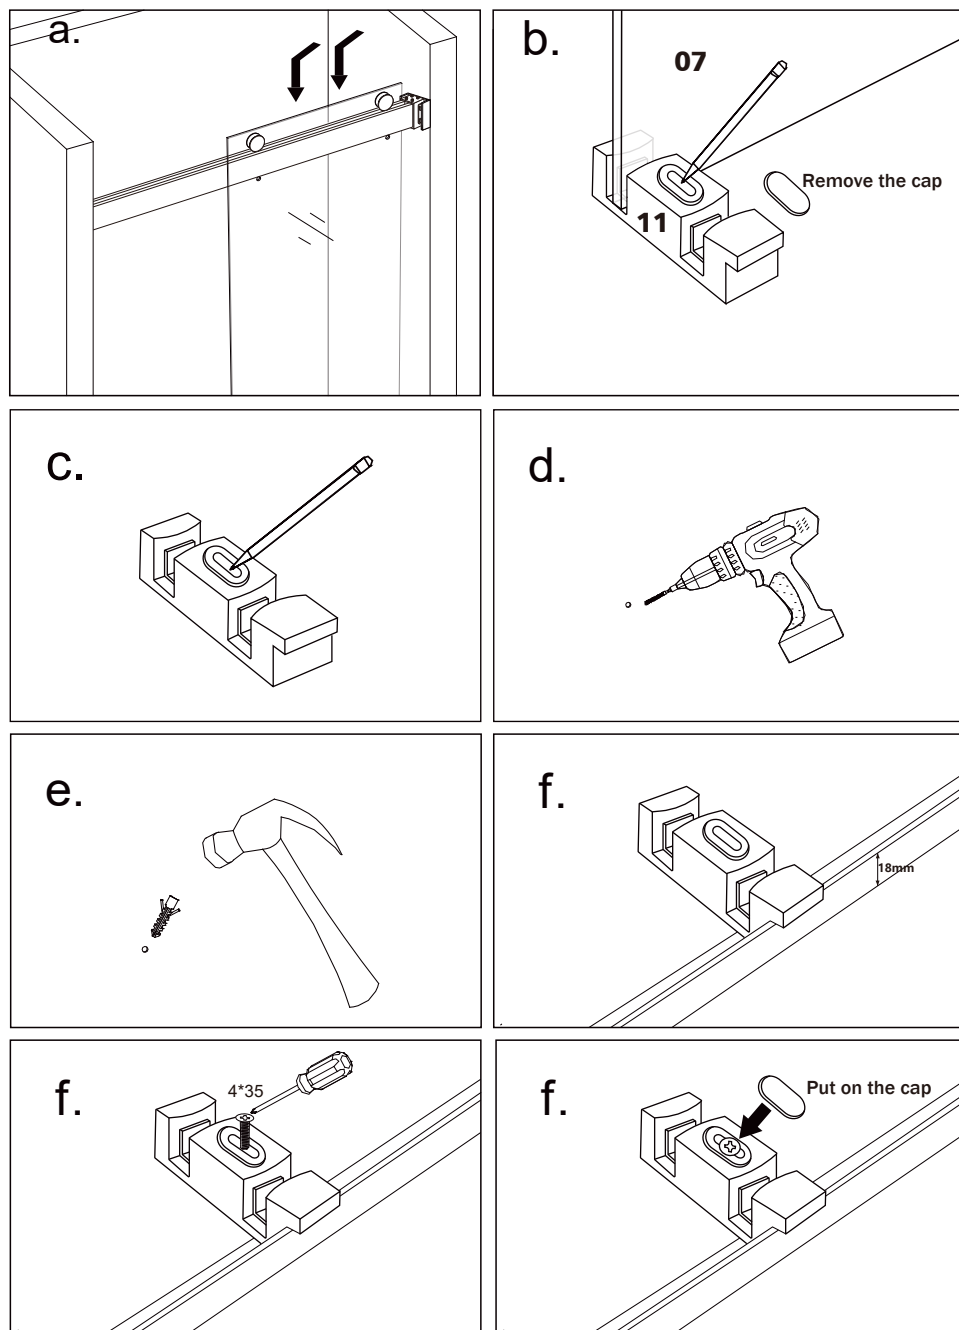


INSTALLATION STEPS

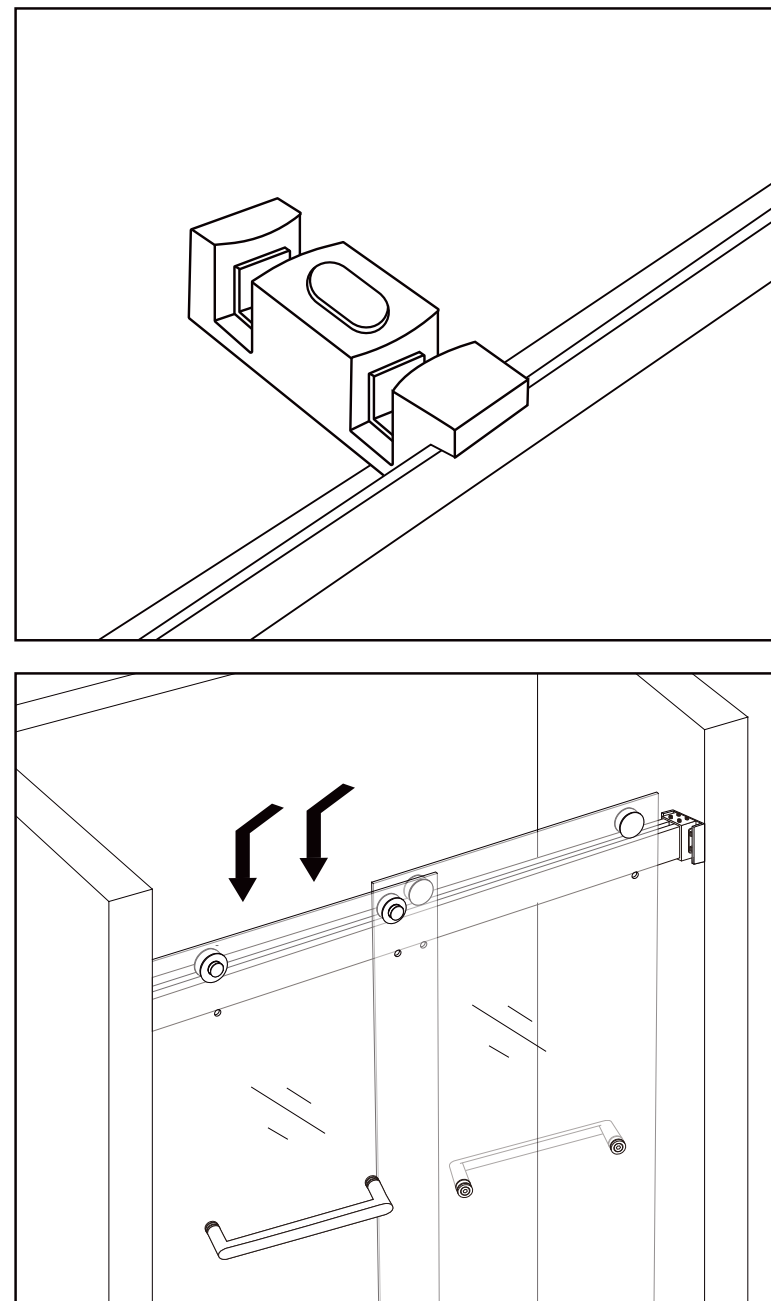

INSTALLATION STEPS

The top of Anti Jumping Knob (#6) should be 1 mm away from the bottom of the Upper Guide Rail(#1)
Use M4x30 Screw (#10) to fix the Positioning Block (#03) at bothends of the Anti-Splash Threshold (#12).

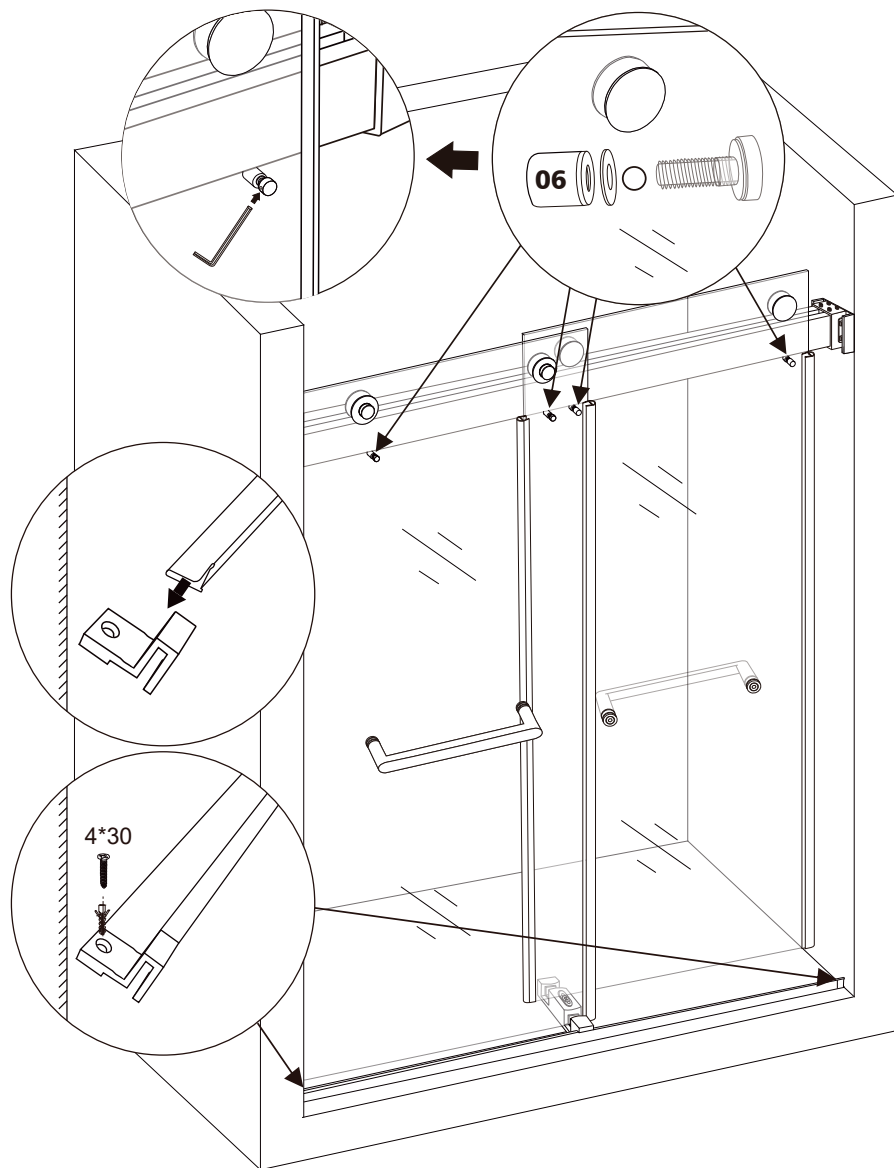

INSTALLATION STEPS

The top of the Water Retaining Strip(#09) is below the Upper Guide Rail(#01) , align the bottom with the ground.

